



TÜRK LOYDU

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 1 of 24

Date:09.05.2013

Related Requirement:UR S19 (Rev.5 July 2004)

Subject: Retrospective Application for Evaluation of Scantlings of the Transverse Watertight Corrugated Bulkhead between Cargo Holds Nos. 1 and 2, with Cargo Hold No. 1 Flooded, for Existing Bulk Carriers

Transverse Watertight Corrugated Bulkhead between Cargo Holds Nos. 1 and 2, with Cargo Hold No. 1 Flooded

1. Application and definitions*

These requirements apply to all bulk carriers of 150 m in length and above, in the foremost hold, intending to carry solid bulk cargoes having a density of 1,78 t/m³, or above, with single deck, topside tanks and hopper tanks, fitted with vertically corrugated transverse watertight bulkheads between cargo holds No. 1 and 2 where:

- the foremost hold is bounded by the side shell only for ships which were contracted for construction prior to 1 July 1998, and have not been constructed in compliance with IACS Unified Requirement S18,
- the foremost hold is double side skin construction of less than 760 mm breadth measured perpendicular to the side shell in ships, the keels of which were laid, or which were at a similar stage of construction, before 1 July 1999 and have not been constructed in compliance with IACS Unified Requirement S18 (Rev. 2, Sept. 2000).

The net scantlings of the transverse bulkhead between cargo holds Nos. 1 and 2 are to be calculated using the loads given in .2, the bending moment and shear force given in .3 and the strength criteria given in 4.

* 1. Changes introduced in Revision 2 to UR S19, i.e. the introduction of the first sentence of S19.6 as well as the Annex are to be applied not later than 1 July 1998.

2. Annex 2 contains, for guidance only, a flow chart entitled "Guidance to assess capability of Carriage of High Density Cargoes on Existing Bulk Carriers according to the Strength of Transverse Bulkhead between Cargo Holds Nos. 1 and 2".

3. Changes introduced in Rev.4 of UR S19 are to be uniformly implemented from 1 July 2001.

4. The "contracted for construction" date means the date on which the contract to build the vessel is signed between the prospective owner and the shipbuilder. For further details regarding the date of "contract for construction", refer to IACS Procedural Requirement (PR) No. 29.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 2 of 24

Date: 09.05.2013

Where necessary, steel renewal and/or reinforcements are required as per .6.

In these requirements, homogeneous loading condition means a loading condition in which the ratio between the highest and the lowest filling ratio, evaluated for the two foremost cargo holds, does not exceed 1,20, to be corrected for different cargo densities.

2. Load model

2.1 General

The loads to be considered as acting on the bulkhead are those given by the combination of the cargo loads with those induced by the flooding of cargo hold No.1.

The most severe combinations of cargo induced loads and flooding loads are to be used for the check of the scantlings of the bulkhead, depending on the loading conditions included in the loading manual:

- homogeneous loading conditions;
- non homogeneous loading conditions.

Non homogeneous part loading conditions associated with multiport loading and unloading operations for homogeneous loading conditions need not to be considered according to these requirements.

2.2 Bulkhead corrugation flooding head

The flooding head h_f (see Figure 1) is the distance, in m, measured vertically with the ship in the upright position, from the calculation point to a level located at a distance d_f , in m, from the baseline equal to:

- in general: D
- for ships less than 50,000 tonnes deadweight with Type B freeboard: $0,95 \cdot D$

D being the distance, in m, from the baseline to the freeboard deck at side amidship (see Figure 1).

- for ships to be operated at an assigned load line draught T_r less than the permissible load line draught T , the flooding head defined in a) and b) above may be reduced by $T - T_r$.


TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 3 of 24

Date: 09.05.2013

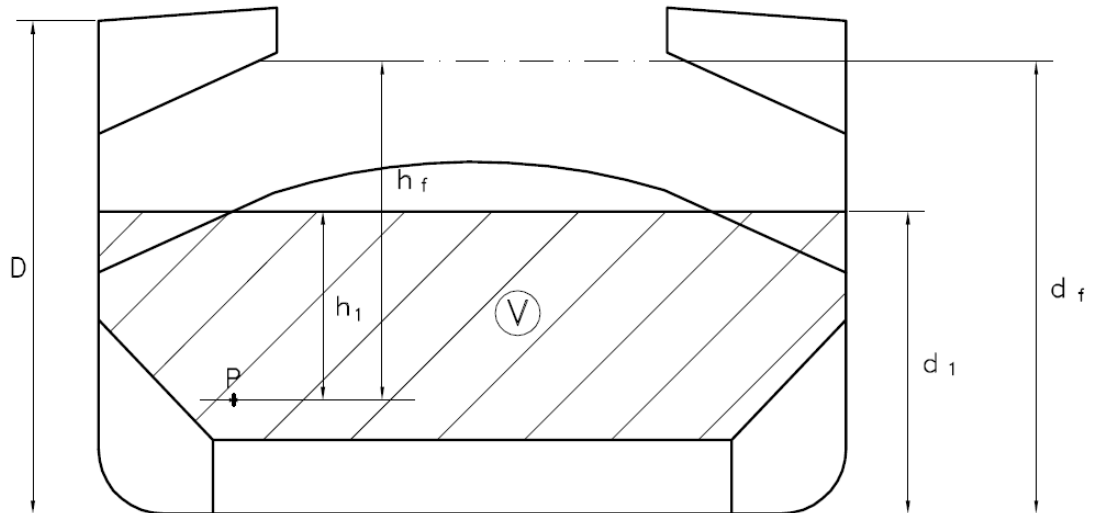

V = Volume of cargo

P = Calculation point

Figure 1 Definition of D , h_1 and d_1

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 4 of 24

Date: 09.05.2013

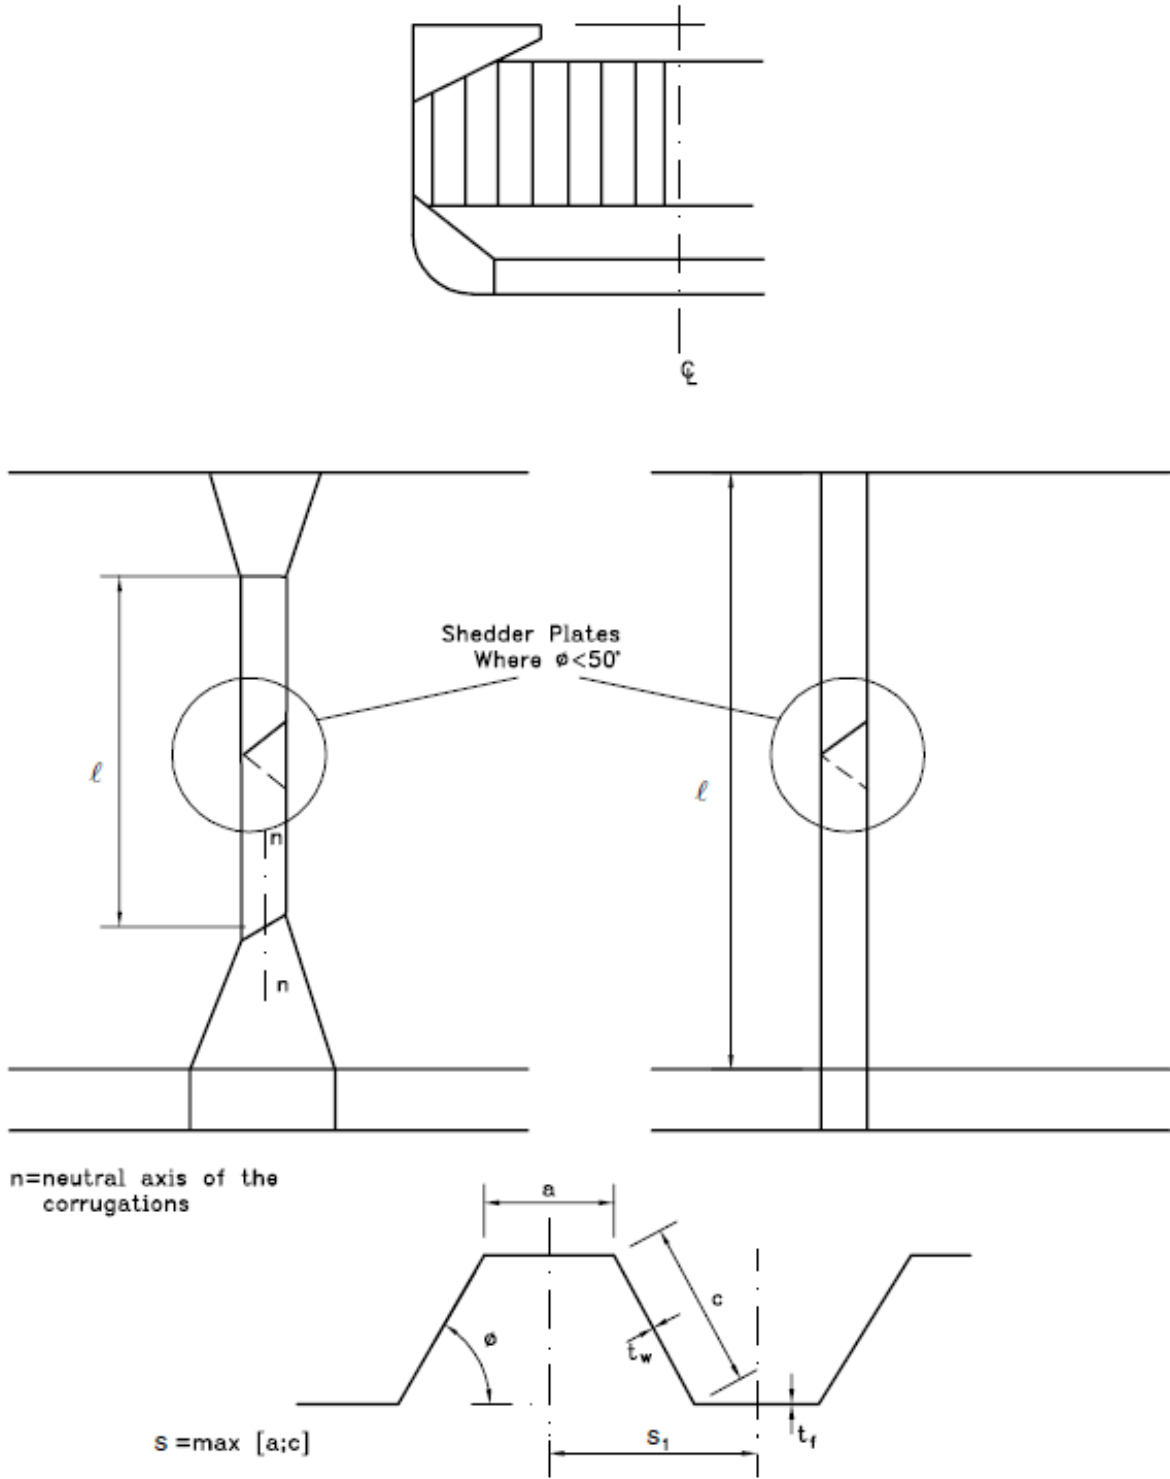


Figure 2a Spacing of corrugations

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 5 of 24

Date: 09.05.2013

2.3 Pressure in the flooded hold

2.3.1 Bulk cargo loaded hold

Two cases are to be considered, depending on the values of d_1 and d_f , d_1 (see Figure 1) being a distance from the baseline given, in m, by:

$$d_1 = \frac{M_c}{\rho_c \cdot l_c \cdot B} + \frac{V_{LS}}{l_c \cdot B} + (h_{HT} - h_{DB}) \cdot \frac{b_{HT}}{B} + h_{DB}$$

where:

M_c = mass of cargo, in tonnes, in hold No. 1

ρ_c = bulk cargo density, in t/m^3

l_c = length of hold No. 1, in m

B = ship's breadth amidship, in m

v_{LS} = volume, in m^3 , of the bottom stool above the inner bottom

h_{HT} = height of the hopper tanks amidship, in m, from the baseline

h_{DB} = height of the double bottom, in m

b_{HT} = breadth of the hopper tanks amidship, in m.

a) $d_f \geq d_1$

At each point of the bulkhead located at a distance between d_1 and d_f from the baseline, the pressure $p_{c,f}$, in kN/m^2 , is given by:

$$p_{c,f} = \rho \cdot g \cdot h_f$$

where:

ρ = sea water density, in t/m^3

g = $9,81 \text{ m/s}^2$, gravity acceleration

h_f = flooding head as defined in .2.2.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 6 of 24

Date: 09.05.2013

At each point of the bulkhead located at a distance lower than d_1 from the baseline, the pressure $p_{c,f}$, in kN/m^2 , is given by:

$$p_{c,f} = \rho \cdot g \cdot h_f + [\rho_c - \rho \cdot (1 - \text{perm})] \cdot g \cdot h_1 \cdot \tan^2 \gamma$$

where:

ρ, g, h_f = as given above

ρ_c = bulk cargo density, in t/m^3

perm = permeability of cargo, to be taken as 0,3 for ore (corresponding bulk cargo density for iron ore may generally be taken as $3,0 \text{ t/m}^3$),

h_1 = vertical distance, in m, from the calculation point to a level located at a distance d_1 , as defined above, from the base line (see Figure 1)

γ = $45^\circ - (\phi/2)$

ϕ = angle of repose of the cargo, in degrees, and may generally be taken as 35° for iron ore.

The force $F_{c,f}$, in kN, acting on a corrugation is given by:

$$F_{c,f} = s_1 \cdot \left(\rho \cdot g \cdot \frac{(d_f - d_1)}{2} + \frac{\rho \cdot g \cdot (d_f - d_1) + (p_{c,f})_{le}}{2} \cdot (d_1 - h_{DB} - h_{LS}) \right)$$

where:

s_1 = spacing of corrugations, in m (see Figure 2a)

ρ, g, d_1, h_{DB} = as given above

d_f = as given in .2.2

$(p_{c,f})_{le}$ = pressure, in kN/m^2 , at the lower end of the corrugation

h_{LS} = height of the lower stool, in m, from the inner bottom.

b) $d_f < d_1$

At each point of the bulkhead located at a distance between d_f and d_1 from the baseline, the pressure $p_{c,f}$, in kN/m^2 , is given by:

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 7 of 24

Date: 09.05.2013

$$p_{c,f} = \rho_c \cdot g \cdot h_1 \cdot \tan^2 \gamma$$

where:

ρ_c, g, h_1, γ = as given in a) above

At each point of the bulkhead located at a distance lower than d_f from the baseline, the pressure $p_{c,f}$, in kN/m^2 , is given by:

$$p_{c,f} = \rho \cdot g \cdot h_f + [\rho_c \cdot h_1 - \rho \cdot (1 - \text{perm}) \cdot h_f] \cdot g \cdot \tan^2 \gamma$$

where:

$\rho, g, h_f, \rho_c, h_1, \text{perm}, \gamma$ = as given in a) above

The force $F_{c,f}$, in kN, acting on a corrugation is given by:

$$F_{c,f} = s_1 \cdot \left(\rho_c \cdot g \cdot \frac{(d_1 - d_f)}{2} \cdot \tan^2 \gamma + \frac{\rho_c \cdot g \cdot (d_1 - d_f) \cdot \tan^2 \gamma + (p_{c,f})_{le}}{2} \cdot (d_f - h_{DB} - h_{LS}) \right)$$

where:

$s_1, \rho_c, g, \gamma, (p_{c,f})_{le}, h_{LS}$ = as given in a) above

d_1, h_{DB} = as given in 2.3.1

d_f = as given in 2.2.

2.3.2 Empty hold

At each point of the bulkhead, the hydrostatic pressure p_f induced by the flooding head h_f is to be considered.

The force F_f , in kN, acting on a corrugation is given by:

where:

s_1, ρ, g, h_{LS} = as given in 2.3.1 a)

h_{DB} = as given in 2.3.1

d_f = as given in 2.2.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 8 of 24

Date: 09.05.2013

2.4 Pressure in the non-flooded bulk cargo loaded hold

At each point of the bulkhead, the pressure p_c , in kN/m^2 , is given by:

$$p_c = \rho_c \cdot g \cdot h_1 \cdot \tan^2 \gamma$$

where:

p_c, g, h_1, γ = as given in 2.3.1 a)

The force F_c , in kN, acting on a corrugation is given by:

$$F_c = \rho_c \cdot g \cdot s_1 \cdot \frac{(d_1 - h_{DB} - h_{LS})^2}{2} \cdot \tan^2 \gamma$$

where:

$\rho_c, g, s_1, h_{LS}, \gamma$ = as given in 2.3.1 a)

d_1, h_{DB} = as given in 2.3.1

2.5 Resultant pressure

2.5.1 Homogeneous loading conditions

At each point of the bulkhead structures, the resultant pressure p , in kN/m^2 , to be considered for the scantlings of the bulkhead is given by:

$$p = \rho_{c,f} - 0,8 \cdot \rho_c$$

The resultant force F , in kN, acting on a corrugation is given by:

$$F = F_{c,f} - 0,8 \cdot F_c$$

2.5.2 Non homogeneous loading conditions

At each point of the bulkhead structures, the resultant pressure p , in kN/m^2 , to be considered for the scantlings of the bulkhead is given by:

$$p = \rho_{c,f}$$

The resultant force F , in kN, acting on a corrugation is given by:

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 9 of 24

Date: 09.05.2013

$$F = F_{c,f}$$

In case hold No.1, in non homogeneous loading conditions, is not allowed to be loaded, the resultant pressure p , in kN/m^2 , to be considered for the scantlings of the bulkhead is given by:


$$p = p_r$$

and the resultant force F , in kN , acting on a corrugation is given by:

$$F = F_r$$

3. Bending moment and shear force in the bulkhead corrugations

The bending moment M and the shear force Q in the bulkhead corrugations are obtained using the formulae given in .3.1 and .3.2. The M and Q values are to be used for the checks in 4.

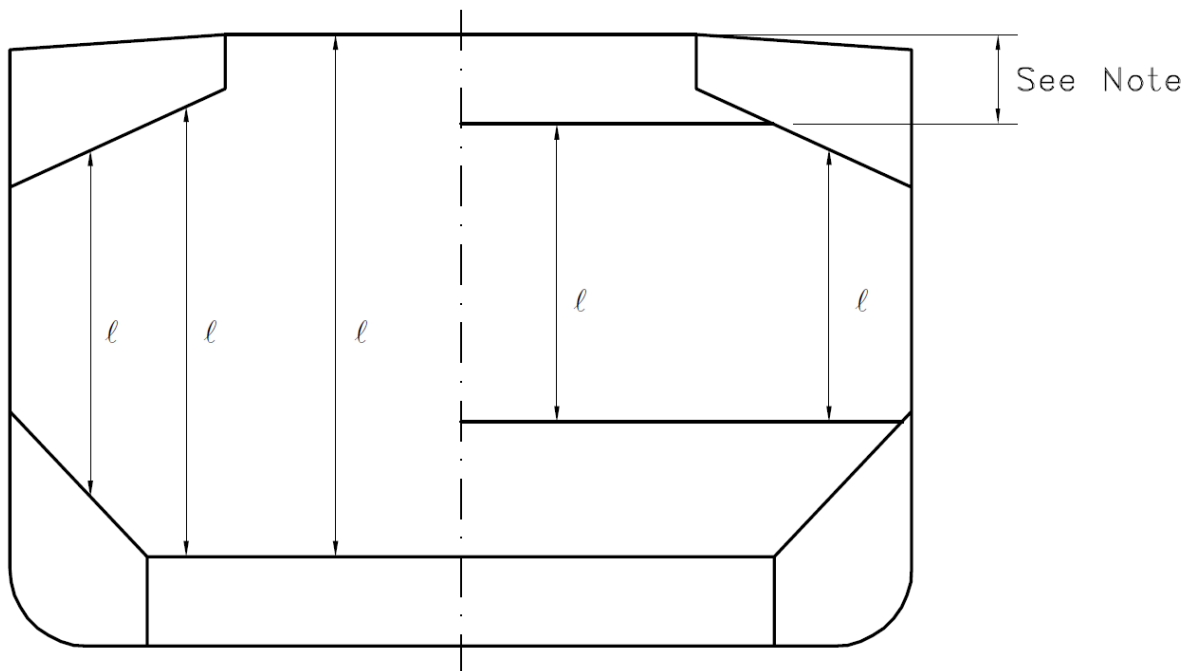

Note: For the definition of l , the internal end of the upper stool is not to be taken more than a distance from the deck at the centre line equal to:

- 3 times the depth of corrugations, in general
- 2 times the depth of corrugations, for rectangular stool

Figure 2b Definition of l

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 10 of 24

Date: 09.05.2013

3.1 Bending moment

The design bending moment M , in $\text{kN}\cdot\text{m}$, for the bulkhead corrugations is given by:

$$M = \frac{F \cdot l}{8}$$

where:

F = resultant force, in kN , as given in .2.5

l = span of the corrugation, in m , to be taken according to Figures 2a and 2b

3.2 Shear force

The shear force Q , in kN , at the lower end of the bulkhead corrugations is given by:

$$Q = 0,8 \cdot F$$

where:

F = as given in .2.5

4. Strength criteria

4.1 General

The following criteria are applicable to transverse bulkheads with vertical corrugations (see Figure 2a).

Requirements for local net plate thickness are given in .4.7.

In addition, the criteria given in .4.2 and .4.5 are to be complied with.

Where the corrugation angle ϕ shown in Figure 2a is less than 50° , an horizontal row of staggered shedder plates is to be fitted at approximately mid depth of the corrugations (see Figure 2a) to help preserve dimensional stability of the bulkhead under flooding loads. The shedder plates are to be welded to the corrugations by double continuous welding, but they are not to be welded to the side shell.

The thicknesses of the lower part of corrugations considered in the application of .4.2 and .4.3 are to be maintained for a distance from the inner bottom (if no lower stool is fitted) or the top of the lower stool not less than $0,15 \cdot l$.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 11 of 24

Date: 09.05.2013

The thicknesses of the middle part of corrugations considered in the application of .4.2 and .4.4 are to be maintained to a distance from the deck (if no upper stool is fitted) or the bottom of the upper stool not greater than $0,3 \cdot l$.

4.2 Bending capacity and shear stress τ

The bending capacity is to comply with the following relationship:

$$10^3 \cdot \frac{M}{0,5 \cdot Z_{le} \cdot \sigma_{a,le} + Z_m \cdot \sigma_{a,m}} \leq 1,0$$

where:

M = bending moment, in $\text{kN} \cdot \text{m}$, as given in .3.1.

Z_{le} = section modulus of one half pitch corrugation, in cm^3 , at the lower end of corrugations, to be calculated according to .4.3.

Z_m = section modulus of one half pitch corrugation, in cm^3 , at the mid-span of corrugations, to be calculated according to .4.4.

$\sigma_{a,le}$ = allowable stress, in N/mm^2 , as given in .4.5, for the lower end of corrugations

$\sigma_{a,m}$ = allowable stress, in N/mm^2 , as given in .4.5, for the mid-span of corrugations.

In no case Z_m is to be taken greater than the lesser of $1,15 \cdot Z_{le}$ and $1,15 \cdot Z'_{le}$ for calculation of the bending capacity, Z'_{le} being defined below.

In case effective shedders plates are fitted which:

- are not knuckled;
 - are welded to the corrugations and the top of the lower stool by one side penetration welds or equivalent;
 - are fitted with a minimum slope of 45° and their lower edge is in line with the stool side plating;
- or effective gusset plates are fitted which:
- are fitted in line with the stool side plating;
 - have material properties at least equal to those provided for the flanges,

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 12 of 24

Date: 09.05.2013

the section modulus Z'_{le} , in cm^3 , is to be taken not larger than the value Z'_{le} , in cm^3 , given by:

$$Z'_{le} = Z_g + 10^3 \cdot \frac{Q \cdot h_g - 0,5 \cdot h_g^2 \cdot s_1 \cdot p_g}{\sigma_a}$$

where:

Z_g = section modulus of one half pitch corrugation, in cm^3 , according to .4.4, in way of the upper end of shedder or gusset plates, as applicable

Q = shear force, in kN, as given in .3.2

h_g = height, in m, of shedders or gusset plates, as applicable (see Figures 3a, 3b, 4a and 4b)

s_1 = as given in .2.3.1 a)

p_g = resultant pressure, in kN/m^2 , as defined in .2.5, calculated in way of the middle of the shedders or gusset plates, as applicable

σ_a = allowable stress, in N/mm^2 , as given in .4.5.

Stresses τ are obtained by dividing the shear force Q by the shear area. The shear area is to be reduced in order to account for possible non-perpendicularity between the corrugation webs and flanges. In general, the reduced shear area may be obtained by multiplying the web sectional area by $(\sin \phi)$, ϕ being the angle between the web and the flange.

When calculating the section moduli and the shear area, the net plate thicknesses are to be used.

The section moduli of corrugations are to be calculated on the basis of the requirements given in .4.3 and .4.4.

4.3 Section modulus at the lower end of corrugations

The section modulus is to be calculated with the compression flange having an effective flange width, b_{ef} , not larger than as given in 4.6.1.

If the corrugation webs are not supported by local brackets below the stool top (or below the inner bottom) in the lower part, the section modulus of the corrugations is to be calculated considering the corrugation webs 30% effective.

- a) Provided that effective shedder plates, as defined in .4.2, are fitted (see Figures 3a and 3b), when calculating the section modulus of corrugations at the lower end (cross-section 1 in Figures 3a and 3b), the area of flange plates, in cm^2 , may be increased by

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 13 of 24

Date: 09.05.2013

$$\left(2,5 \cdot a \cdot \sqrt{t_f \cdot t_{sh}} \cdot \sqrt{\frac{\sigma_{FSH}}{\sigma_{Ffl}}} \right)$$

(not to be taken greater than $2,5 \cdot a \cdot t_f$) where:

a = width, in m, of the corrugation flange (see Figure 2a)

tsh = net shedder plate thickness, in mm

t_f = net flange thickness, in mm

σ_{Fsh} = minimum upper yield stress, in N/mm², of the material used for the shedder plates

σ_{Ffl} = minimum upper yield stress, in N/mm², of the material used for the corrugation flanges.

b) Provided that effective gusset plates, as defined in .4.2, are fitted (see Figures 4a and 4b), when calculating the section modulus of corrugations at the lower end (cross-section 1 in Figures 4a and 4b), the area of flange plates, in cm², may be increased by $(7 \cdot h_g \cdot t_{gu})$ where:

$$\left(\frac{10}{7} \cdot s_{gu} \right)$$

h_g = height of gusset plate in m, see Figures 4a and 4b, not to be taken greater than :

s_{gu} = width of the gusset plates, in m

t_{gu} = net gusset plate thickness, in mm, not to be taken greater than t_f

t_f = net flange thickness, in mm, based on the as built condition.

c) If the corrugation webs are welded to a sloping stool top plate, which is at an angle not less than 45° with the horizontal plane, the section modulus of the corrugations may be calculated considering the corrugation webs fully effective. In case effective gusset plates are fitted, when calculating the section modulus of corrugations the area of flange plates may be increased as specified in b) above. No credit can be given to shedder plates only.

For angles less than 45°, the effectiveness of the web may be obtained by linear interpolation between 30% for 0° and 100% for 45°.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 14 of 24

Date: 09.05.2013

4.4 Section modulus of corrugations at cross-sections other than the lower end

The section modulus is to be calculated with the corrugation webs considered effective and the compression flange having an effective flange width, b_{ef} , not larger than as given in 4.6.1.

4.5 Allowable stress check

The normal and shear stresses σ and τ are not to exceed the allowable values σ_a and τ_a , in N/mm^2 , given by:

$$\sigma_a = \sigma_F$$

$$\sigma_a = 0,5 \cdot \sigma_F$$

σ_F = minimum upper yield stress, in N/mm^2 , of the material.

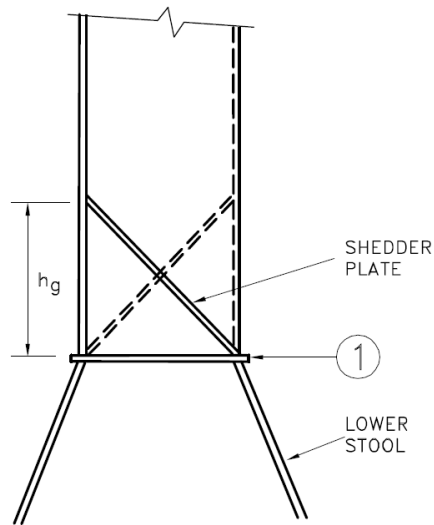


Figure 3a Symmetric shedder plates

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 15 of 24

Date: 09.05.2013

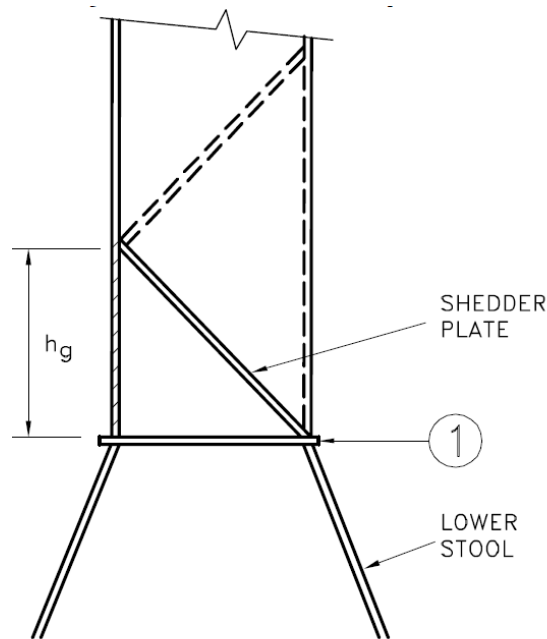


Figure 3b Asymmetric shedder plates

4.6 Effective compression flange width and shear buckling check

4.6.1 Effective width of the compression flange of corrugations

The effective width b_{ef} , in m, of the corrugation flange is given by:

$$b_{ef} = C_e \cdot a$$

where:

$$C_e = \frac{2,25}{\beta} - \frac{1,25}{\beta^2} \text{ for } \beta > 1,25$$

$$C_e = 1,0 \text{ for } \beta \leq 1,25$$

$$\beta = 10^3 \cdot \frac{a}{t_f} \cdot \sqrt{\frac{\sigma_F}{E}}$$

t_f = net flange thickness, in mm

a = width, in m, of the corrugation flange (see Figure 2a)

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 16 of 24

Date: 09.05.2013

σ_F = minimum upper yield stress, in N/mm^2 , of the material

E = modulus of elasticity, in N/mm^2 , to be assumed equal to $2,06 \cdot 10^5 N/mm^2$ for steel

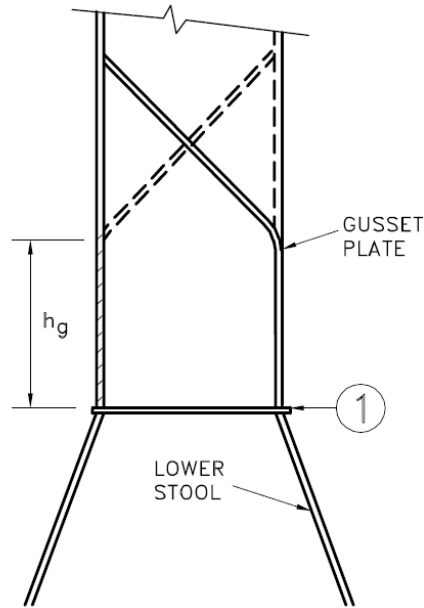


Figure 4a Symmetric gusset / shedder plates

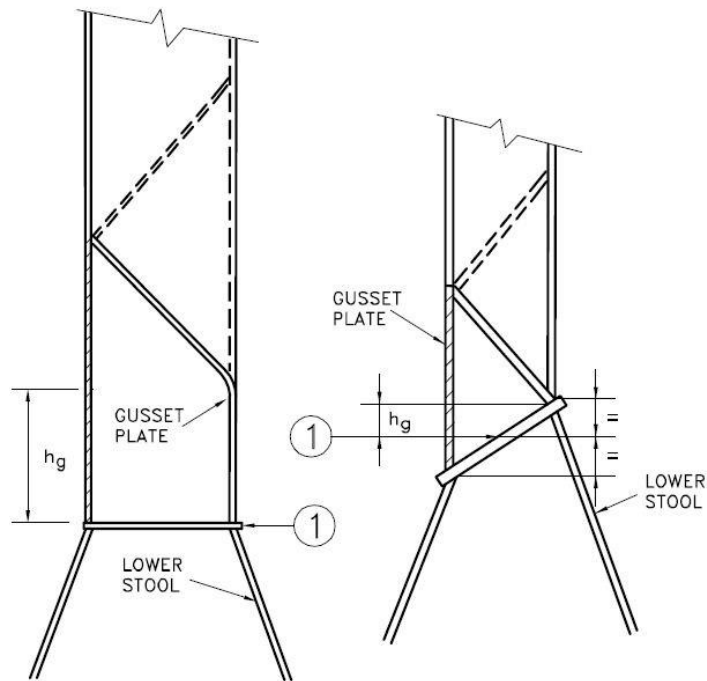


Figure 4b Asymmetric gusset / shedder plates

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 17 of 24

Date: 09.05.2013

4.6.2 Shear

The buckling check is to be performed for the web plates at the corrugation ends.

The shear stress τ is not to exceed the critical value τ_c , in N/mm^2 obtained by the following:

$$\begin{aligned}\tau_c &= \tau_E \quad \text{when } \tau_E \leq \frac{\tau_F}{2} \\ &= \tau_F \left| 1 - \frac{\tau_E}{\tau_F} \right| \quad \text{when } \tau_E > \frac{\tau_F}{2} \\ &\tau_F \frac{\sigma_F}{\sqrt{3}}\end{aligned}$$

where:

σ_F = minimum upper yield stress, in N/mm^2 , of the material

$$\tau_E = 0.9k_t E \left(\frac{t}{1000c} \right)^2 \quad (N/mm^2)$$

k_t , E , t and c are given by:

$$k_t = 6.34$$

E = modulus of elasticity of material as given in .4.6.1

t = net thickness, in mm, of corrugation web

c = width, in m, of corrugation web (See Figure 2a)

4.7 Local net plate thickness

The bulkhead local net plate thickness t , in mm, is given by:

$$t = 14,9 \cdot s_w \cdot \sqrt{\frac{p}{\sigma_F}}$$

where:

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 18 of 24

Date: 09.05.2013

s_w = plate width, in m, to be taken equal to the width of the corrugation flange or web, whichever is the greater (see Figure 2a)

p = resultant pressure, in kN/m^2 , as defined in .2.5, at the bottom of each strake of plating; in all cases, the net thickness of the lowest strake is to be determined using the resultant pressure at the top of the lower stool, or at the inner bottom, if no lower stool is fitted or at the top of shedders, if shedder or gusset/shedder plates are fitted.

σ_F = minimum upper yield stress, in N/mm^2 , of the material.

For built-up corrugation bulkheads, when the thicknesses of the flange and web are different, the net thickness of the narrower plating is to be not less than t_n , in mm, given by:

$$t_n = 14,9 \cdot s_n \cdot \sqrt{\frac{p}{\sigma_F}}$$

s_n being the width, in m, of the narrower plating.

The net thickness of the wider plating, in mm, is not to be taken less than the maximum of the following values:

$$t_w = 14,9 \cdot s_w \cdot \sqrt{\frac{p}{\sigma_F}}$$

$$t_w = \sqrt{\frac{440 \cdot s_w^2 \cdot p}{\sigma_F} - t_{np}^2}$$

where $t_{np} \leq$ actual net thickness of the narrower plating and not to be greater than:

$$14,9 \cdot s_w \cdot \sqrt{\frac{p}{\sigma_F}}$$

5. Local details

As applicable, the design of local details is to comply with requirements of **TL** for the purpose of transferring the corrugated bulkhead forces and moments to the boundary structures, in particular to the double bottom and cross-deck structures.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 19 of 24

Date: 09.05.2013

In particular, the thickness and stiffening of gusset and shedder plates, installed for strengthening purposes, is to comply with requirements of **TL**, on the basis of the load model in 2.

Unless otherwise stated, weld connections and materials are to be dimensioned and selected in accordance with requirements of **TL**.

6. Corrosion addition and steel renewal

Renewal/reinforcement shall be done in accordance with the following requirements and the guidelines contained in the Annex.

- a) Steel renewal is required where the gauged thickness is less than $t_{net} + 0,5$ mm, t_{net} being the thickness used for the calculation of bending capacity and shear stresses as given in .4.2. or the local net plate thickness as given in .4.7. Alternatively, reinforcing doubling strips may be used providing the net thickness is not dictated by shear strength requirements for web plates (see .4.5 and .4.6.2) or by local pressure requirements for web and flange plates (see .4.7).

Where the gauged thickness is within the range $t_{net} + 0,5$ mm and $t_{net} + 1,0$ mm, coating (applied in accordance with the coating manufacturer's requirements) or annual gauging may be adopted as an alternative to steel renewal.

- b) Where steel renewal or reinforcement is required, a minimum thickness of $t_{net} + 2,5$ mm is to be replenished for the renewed or reinforced parts.
- c) When:

$$0,8 \cdot (\sigma_{Ffl} \cdot t_{fl}) \geq \sigma_{Fst} \cdot t_{st}$$

where:

σ_{Ffl} = minimum upper yield stress, in N/mm^2 , of the material used for the corrugation flanges

σ_{Fst} = minimum upper yield stress, in N/mm^2 , of the material used for the lower stool side plating or floors (if no stool is fitted)

t_{fl} = flange thickness, in mm, which is found to be acceptable on the basis of the criteria specified in a) above or, when steel renewal is required, the replenished thickness according to the criteria specified in b) above. The above flange thickness dictated by local pressure requirements (see .4.7) need not be considered for this purpose

t_{st} = as built thickness, in mm, of the lower stool side plating or floors (if no stool is fitted) gussets with shedder plates, extending from the lower end of corrugations up to 0,1·l, or reinforcing doubling strips (on bulkhead corrugations and stool side plating) are to be fitted.

TECHNICAL CIRCULAR

Circular No: S-P 20/13


Revision: 0

Page: 20 of 24

Date: 09.05.2013

If gusset plates are fitted, the material of such gusset plates is to be the same as that of the corrugation flanges. The gusset plates are to be connected to the lower stool shelf plate or inner bottom (if no lower stool is fitted) by deep penetration welds (see Figure 5).

- d) Where steel renewal is required, the bulkhead connections to the lower stool shelf plate or inner bottom (if no stool is fitted) are to be at least made by deep penetration welds (see Figure 5).
- e) Where gusset plates are to be fitted or renewed, their connections with the corrugations and the lower stool shelf plate or inner bottom (if no stool is fitted) are to be at least made by deep penetration welds (see Figure 5)

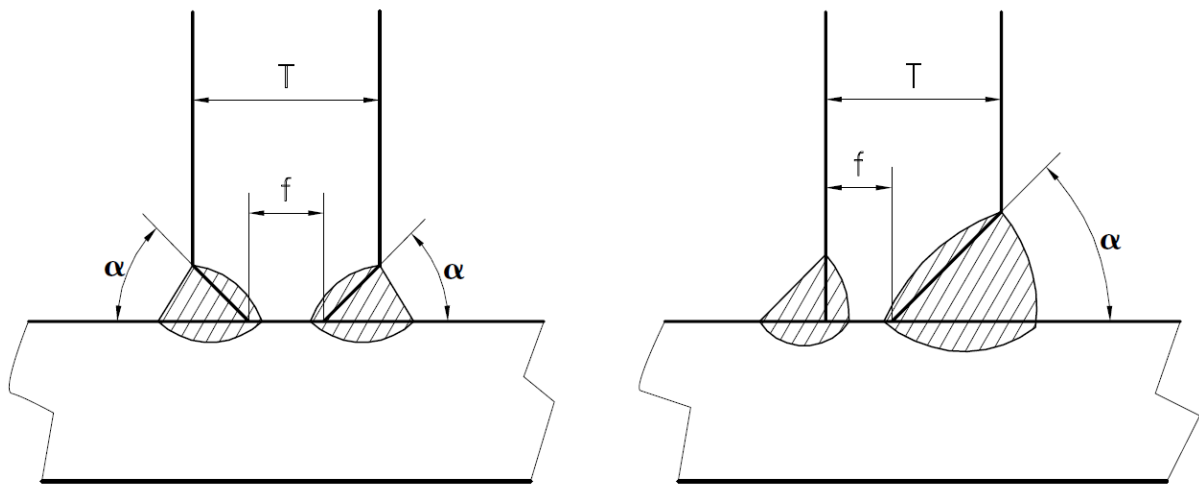

Root Face (f) : 3 mm to T/3 mm

Groove Angle (α) : 40° to 60°

Figure 5 Deep penetration welds

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 21 of 24

Date: 09.05.2013

ANNEX 1

Guidance on Renewal/Reinforcement of Vertically Corrugated Transverse Watertight Bulkhead Between Cargo Holds Nos. 1 and 2

1. The need for renewal or reinforcement of the vertically corrugated transverse watertight bulkhead between cargo holds Nos. 1 and 2 will be determined by **TL** on a case by case basis using the criteria given in in association with the most recent gaugings and findings from survey.
2. In addition to class requirements, the assessment of the transverse corrugated bulkhead will take into account the following:-
 - Scantlings of individual vertical corrugations will be assessed for reinforcement/renewal based on thickness measurements obtained in accordance with Annex III to UR Z10.2 at their lower end, at mid-depth and in way of plate thickness changes in the lower 70%. These considerations will take into account the provision of gussets and shedder plates and the benefits they offer, provided that they comply with .4.2 and .6.
 - Taking into account the scantlings and arrangements for each case, permissible levels of diminution will be determined and appropriate measures taken in accordance with .6. 3. Where renewal is required, the extent of renewal is to be shown clearly in plans. The vertical distance of each renewal zone is to be determined by considering and in general is to be not less than 15% of the vertical distance between the upper and lower end of the corrugation - measured at the ship's centreline.
3. Where renewal is required, the extent of renewal is to be shown clearly in plans. The vertical distance of each renewal zone is to be determined by considering and in general is to be not less than 15% of the vertical distance between the upper and lower end of the corrugation measured at the ship's centreline.
4. Where the reinforcement is accepted by adding strips, the length of the reinforcing strips is to be sufficient to allow it to extend over the whole depth of the diminished plating. In general, the width and thickness of strips should be sufficient to comply with the requirements. The material of the strips is to be the same as that of the corrugation plating. The strips are to be attached to the existing bulkhead plating by continuous fillet welds. The strips are to be suitably tapered or connected at ends in accordance with practice of **TL**.
5. Where reinforcing strips are connected to the inner bottom or lower stool shelf plates, one side full penetration welding is to be used. When reinforcing strips are fitted to the corrugation flange and are connected to the lower stool shelf plate, they are normally to be aligned with strips of the same scantlings welded to the stool side plating and having a minimum length equal to the breadth of the corrugation flange.
6. Figure 1 gives a general arrangement of structural reinforcement.

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 22 of 24

Date: 09.05.2013

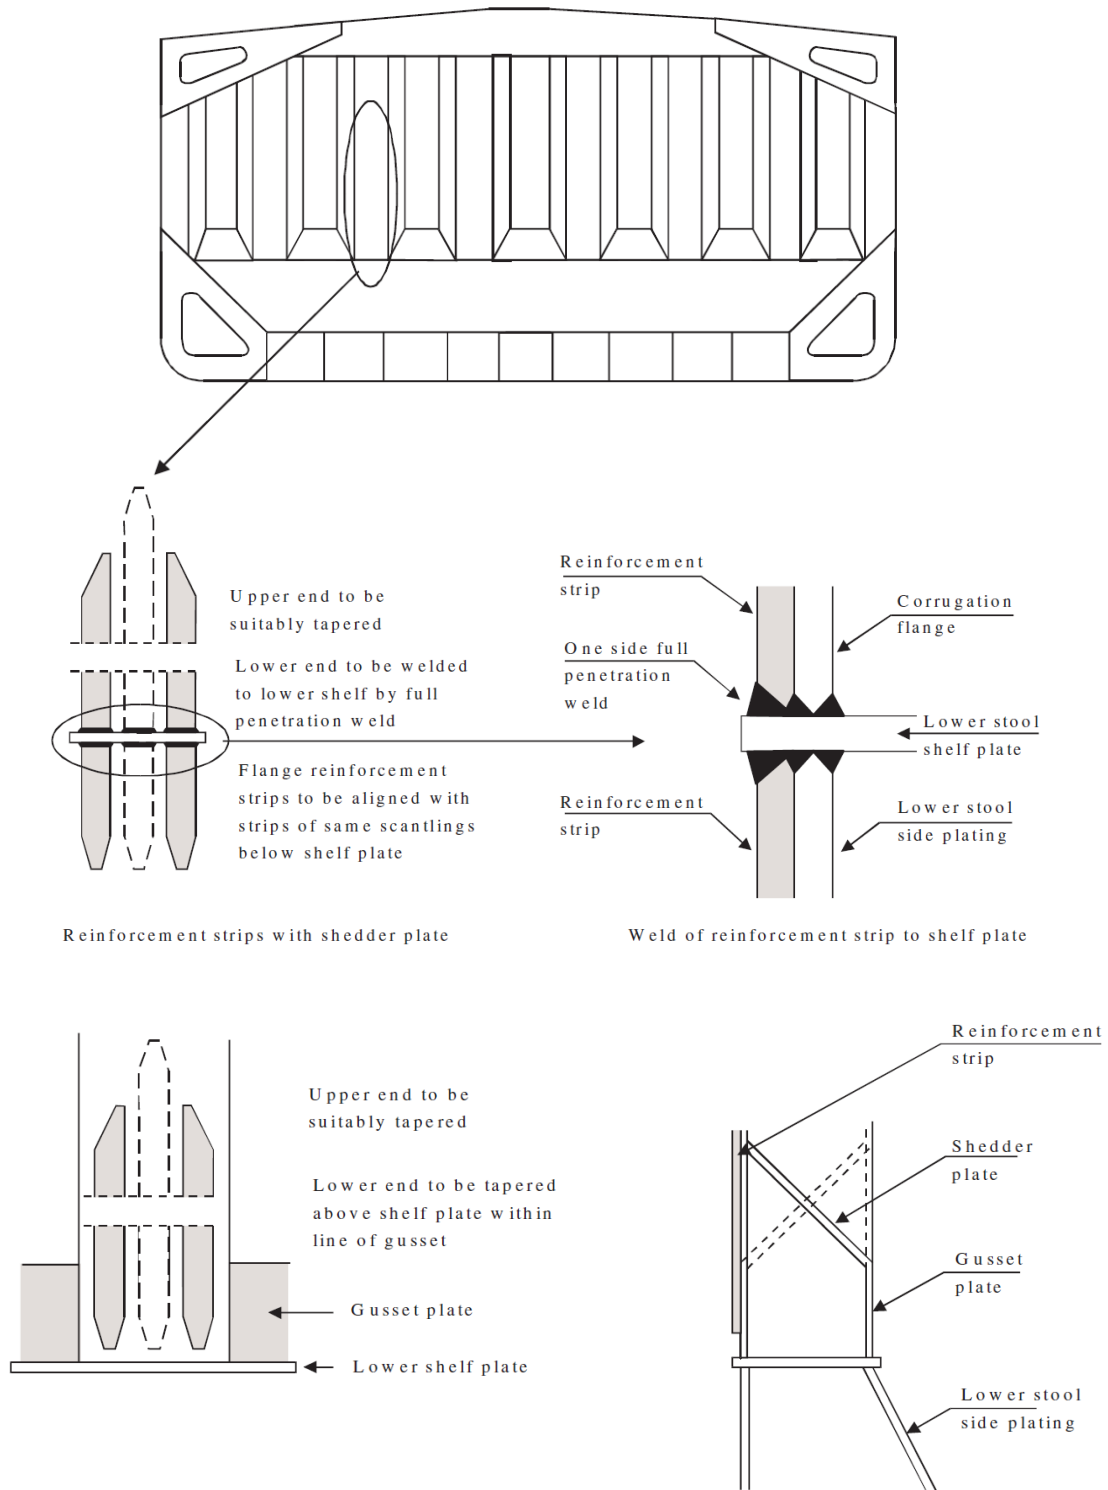


Figure 1 Reinforcement strips with shedder and gusset plates

TECHNICAL CIRCULAR

Circular No: S-P 20/13

Revision: 0

Page: 23 of 24

Date: 09.05.2013

Notes to Figure 1 on reinforcement:

- 1. Square or trapezoidal corrugations are to be reinforced with plate strips fitted to each corrugation flange sufficient to meet the requirements of .*
- 2. The number of strips fitted to each corrugation flange is to be sufficient to meet the requirements of .*
- 3. The shedder plate may be fitted in one piece or prefabricated with a welded knuckle (gusset plate).*
- 4. Gusset plates, where fitted, are to be welded to the shelf plate in line with the flange of the corrugation, to reduce the stress concentrations at the corrugation corners. Ensure good alignment between gusset plate, corrugation flange and lower stool sloping plate. Use deep penetration welding at all connections. Ensure start and stop of welding is as far away as practically possible from corners of corrugation.*
- 5. Shedder plates are to be attached by one side full penetration welds onto backing bars.*
- 6. Shedder and gusset plates are to have a thickness equal to or greater than the original bulkhead thickness. Gusset plate is to have a minimum height (on the vertical part) equal to half of the width of the corrugation flange. Sheddens and gussets are to be same material as flange material.*

TECHNICAL CIRCULAR

ANNEX 2

Guidance to Assess Capability of Carriage of High Density Cargoes on Existing Bulk Carriers according to the Strength of Transverse Bulkhead between Cargo Holds Nos. 1 and 2

